

Tools Required: (Not included)

- A. Phillips head screwdriver
- B. 2.5mm Allen wrench
- C. 4mm Allen wrench
- D. 8mm open wrench
- E. Flat head screwdriver

⚠ CAUTION: To avoid potential shock or other injury, turn power switch **OFF** and disconnect charger before removing or installing the batteries. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a Phillips head screwdriver, remove the four screws in the front of the deck. Using a Phillips head screwdriver and 8mm open wrench, remove the two screws and locknuts in the back of the deck. Using a 4mm Allen wrench remove the two hex bolts. Remove deck plate.

Note: If you are having difficulty removing the screws, use pliers to twist the screw out from the bottom.

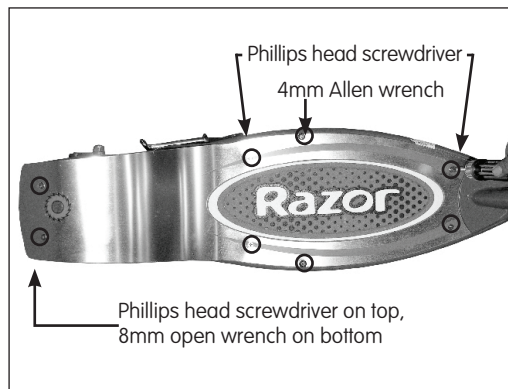


Figure 1

Step 2

Using a Phillips head screwdriver, remove the screws on the battery bracket and remove bracket.



Figure 2

Step 3

Starting from the top of the handlebars, locate the wires leading from the throttle and follow them down to the control module. Disconnect the throttle by depressing the tab on the white plastic connector attached to the control module.

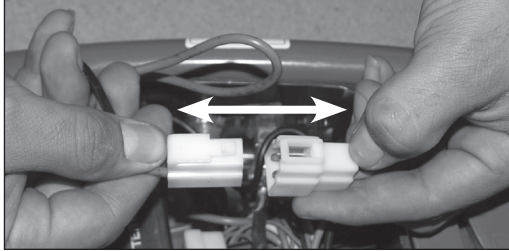


Figure 3

Step 4

Open the trap door on the battery tray and slide throttle connector out of the battery tray.

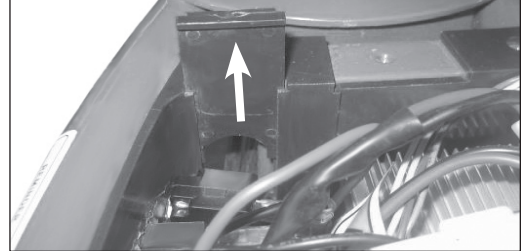


Figure 4

Step 5

Carefully cut the zip tie located between the fork and the deck.

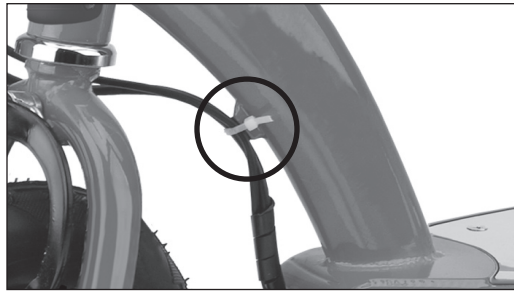


Figure 5

Step 6

Using a 2.5mm Allen wrench, loosen the set screw on the throttle casing and slide the throttle away from the grip, leaving a gap between the grip and throttle.

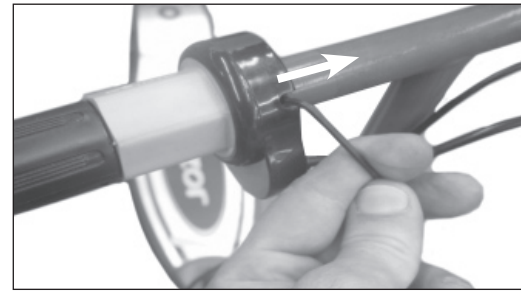


Figure 6

Step 7

Insert a flat screw driver between handlebar and grip. Add a few drops of water or WD-40 inside the grip. Twist the grip back and forth as you pull the grip away from handlebar. Wipe off any excess liquid on handlebars before putting new throttle on.



Figure 7

Step 8

1. Slide new throttle on the handlebar and tighten set screw to secure in place.
2. Reconnect throttle to control module.
Note: Make sure throttle wires are not wrapped around the steering tube.
3. Slide grip back onto handlebar. Make sure grip is secure before riding.
4. Place the bracket back on top of the battery and reattach deck plate.

ATTENTION:

Charge unit at least 18 hours before riding.

Need Help? Visit our website at www.razor.com or call toll-free at **866-467-2967** Monday - Friday 8:00am - 5:00pm Pacific Time.